MONIMAX5200SE Quick Reference Guide							
1 ATM Power On/Off							
			ATM Power On Open the upper front door. Press Power Switch in the direction of "I". ATM Power Off Press Power Switch in the direction of "O".				
Security Door Open							
		Turn the key clockwise to open the security cover. The default password of electronic lock is 1-2-3-4-5-6. Enter this sequence on the electronic lock keypad. (①). The lock will confirm a valid combination entry with a double signal. Lock will signal three (3) times for invalid combination entry. Turn the vault door handle counterclockwise. (②) The vault door will open.					
3	Opening the Exterior Door						
3-1	<ul> <li>Opening the upper front body door,</li> <li>Insert the key and turn it clockwise. (①)</li> <li>Pull the front panel outward.</li> </ul>	3-2	<ul> <li>Opening the lower front body door,</li> <li>Open the security cover with key. (2)</li> <li>Unlock the e-lock and open security door. (3)</li> <li>Image: security cover with key. (2)</li> <li>Unlock the e-lock and open security door. (3)</li> </ul>				
4	Cash Replenishment Caution: The acceptable condition bills should be loaded (Refer to Operator Manual)						
4-1	<ul> <li>Enter to Supervisor mode (Refer to "9 OP Main Screen")</li> <li>Select "SETTLEMENT"</li> <li>Submit "TRIAL CASSETTE TOTAL" to show note count.</li> <li>* To show note count and to clear note count, submit "CASSETTE TOTAL"</li> <li>How to add note count,</li> <li>Select "SETTLEMENT"</li> <li>Select "ADD CASH"</li> <li>Select the cassette to be added the notes(1)</li> <li>Enter the note count and then press ENTER key in PIN Pad. (If you want to add the cash for other cassette, repeat from "1")</li> <li>After completing, press "APPLY" button.</li> </ul>	4-2	<ul> <li>Open the security door. (Refer to "3 Opening the Exterior Door")</li> <li>Pull out the cash cassette carefully.</li> <li>Unlock the cassette cover using key (①).</li> <li>Pull the push plate back until it is locked against the push plate latch. (②) And then, set the bills into the cash cassette.</li> <li>Then, release the push plate from the cash plate latch and allow it gradually to take up its position behind the notes. (③)</li> <li>Close the cassette cover with key, place it carefully on the set guide and push it in until it is locked in place.</li> <li>Image: Close the cassette cover with key.</li> <li>The above description is based on 1000 new note capacity cassette. For 2000 new note capacity cassette, refer to operator manual.</li> </ul>				

MONIMAX5200SE Quick Reference Guide						
5	5 Receipt Paper Replenishment Caution: The acceptable condition papers should b loaded (Refer to Operator Manual)					
5-1	Roll Guide	2 Roll Guide uide Upper Guide	5-2	<ul> <li>Open the upper front door with key. (Refer to "3 Opening the Exterior Door")</li> <li>Remove the roll guide by pulling it off (①).</li> <li>Add the receipt paper into the rod and then insert the roll guide tightly again to fix it. (②).</li> <li>Insert the leading edge of paper between lower guide and upper guide of printer slowly until paper is going to start feeding. (②)</li> </ul>		
6	Note Jam	Caution: Before removing jam, power off for your safety.				
6-1	<ul> <li>Enter to "OP Main" screen, and "CLEAR" button (Refer to "8 Detection of the security door. (Refer to Open the security door. (Refer to the Exterior Door")</li> <li>Pull out the cash dispenser (1)</li> <li>Move the belt by turning the known of the security door. (2)</li> <li>Remove jammed note carefully</li> </ul>	submit evice Reset") to "3 Opening ). ob beside ed note into and power on.	6-2	<ul> <li>* Be sure to check if the belt is positioned correctly after removing the jammed bills.</li> <li>Image: Second second</li></ul>		
7	Receipt Paper Jam					
7-1		2	7-2	<ul> <li>Open the upper front door with key. (Refer to "3 Opening the Exterior Door")</li> <li>To remove a jam inside transport path, press down the button to release the lower roller assembly (①).</li> <li>To take out a jam in front of transport path, lift up the transparent window guide. (②)</li> <li>After finishing clearing the jam, load the receipt paper properly. (③).</li> </ul>		
8 Device Reset						
Operation Program     Operation Program						
9 OP Main Screen						
ENTER PASSWORD			<ul> <li>To enter to Supervisor mode, press ENTER, CLEAR, CANCEL, 1, 2 and 3 keys in order. (Default Password: "555555" and it is changeable in Supervisor mode.) (①)</li> <li>If correct password is entered, "OPERATION FUNCTION" menu will be displayed. (②)</li> <li>* Pressing CLEAR key erases the entered number and pressing CANCEL key goes to in-service-mode.</li> </ul>			
Conta	act Information					