
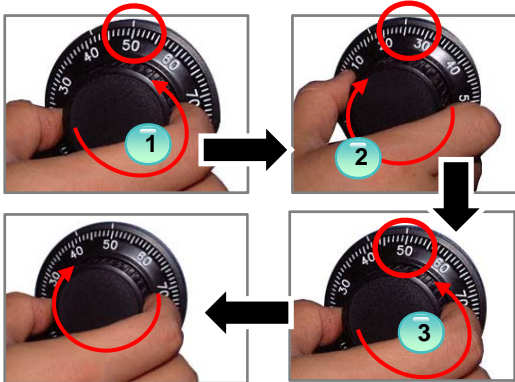
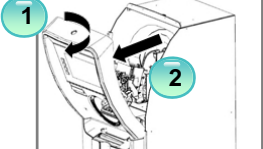
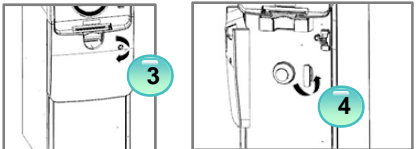
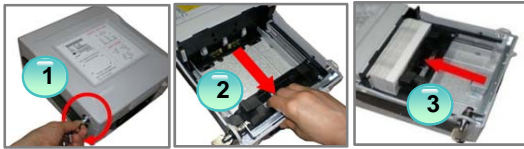


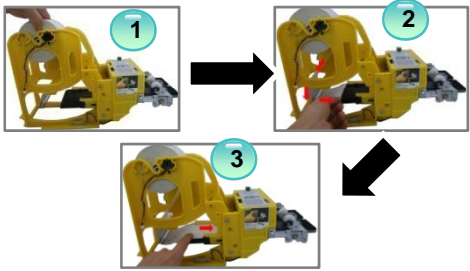
NH2600 Quick Reference Guide

1	ATM Power On/Off	
2	Security Door Open	
3	Opening the Exterior Door	
4	Cash Replenishment	

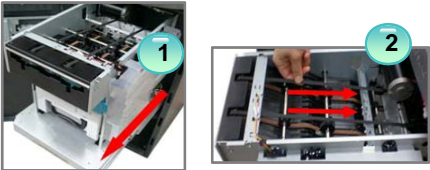
1		 <p>▶▶ ATM Power On</p> <ul style="list-style-type: none"> ● Open the upper front door. ● Press Power Switch in the direction of “I”. <p>▶▶ ATM Power Off</p> <ul style="list-style-type: none"> ● Press Power Switch in the direction of “O”. 	
2		<p>▶▶ Security Door Open</p> <p>(Factory Default Password : 50-25-50)</p> <ul style="list-style-type: none"> ● Turn to the counterclockwise for more than four times and set to “50” (①). ● Turn to the clockwise and stop at “25” at the third times. (②) ● Turn to the counterclockwise and stop at “50” at the second times. ● Turn to the clockwise until the dial temporarily stopped. ● The safe door will open when turning the handle to counterclockwise. <p>* Refer to Operator Manual for Electronic Lock.</p>	
3-1	<ul style="list-style-type: none"> ● Opening the upper front body door, - Insert the key and turn it clockwise. (①) - Pull the front panel outward. (②) 	3-2	<ul style="list-style-type: none"> ● Opening the lower front body door, - Open the security cover with key. (③) - Unlock the dial lock and open security door. (④) 
4-1	Caution: The acceptable condition bills should be loaded (Refer to Operator Manual)		
4-1	<ul style="list-style-type: none"> ● Enter to Supervisor mode (Refer to “9 OP Main Screen”) ● Select “SETTLEMENT” ● Submit “TRIAL CASSETTE TOTAL” to show note count. * To show note count and to clear note count, submit “CASSETTE TOTAL” ● How to add note count, - Select “SETTLEMENT” - Select “ADD CASH” - Select the cassette to be added the notes(①) - Enter the note count and then press ENTER key in PIN Pad. (If you want to add the cash for other cassette, repeat from “①”) - After completing, press “APPLY” button. 	4-2	<ul style="list-style-type: none"> ● Open the security door. (Refer to “3 Opening the Exterior Door”) ● Pull out the cash cassette carefully. ● Unlock the cassette cover using key (①). ● Pull the push plate back until it is locked against the push plate latch. (②) And then, set the bills into the cash cassette. ● Then, release the push plate from the cash plate latch and allow it gradually to take up its position behind the notes. (③) ● Close the cassette cover with key, place it carefully on the set guide and push it in until it is locked in place.  <p>* The above description is based on 1000 new note capacity cassette. For 2000 new note capacity cassette, refer to operator manual.</p>

NH2600 Quick Reference Guide

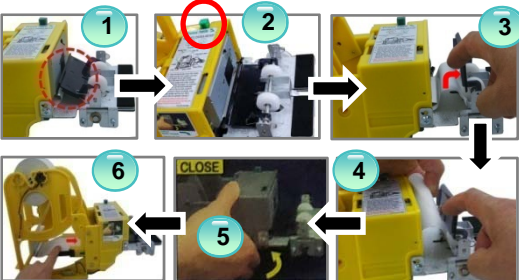
5	Receipt Paper Replenishment	Caution: The acceptable condition papers should be loaded (Refer to Operator Manual)
----------	------------------------------------	---

5-1		<p style="text-align: center;">5-2</p> <ul style="list-style-type: none"> ● Open the upper front door with key. (Refer to “3 Opening the Exterior Door”) ● Place the paper roll on the holder (①). ● Set the paper so the metallic tension guide should be surrounded with paper (②). ● Insert the leading edge of paper between lower guide and upper guide of printer slowly until paper is going to start feeding. (③)
-----	---	--

6	Note Jam	Caution: Before removing jam, power off for your safety.
----------	-----------------	---

6-1	<ul style="list-style-type: none"> ● Enter to “OP Main” screen, and submit “CLEAR” button (Refer to “8 Device Reset”) ● If jam is not cleared, power off ● Open the security door. (Refer to “3 Opening the Exterior Door”) ● Pull out the cash dispenser (①). ● Move the belt by turning the knob beside cash dispenser to move jammed note into a well removed position. (②) ● Remove jammed note carefully and power on. 	<p style="text-align: center;">6-2</p>  <p>* Be sure to check if the belt is positioned correctly after removing the jammed bills.</p> <p>* The above description is based on CDU with 1000 new note capacity cassette. For CDU with 2000 new note capacity cassette, refer to operator manual.</p>
-----	---	--


7	Receipt Paper Jam	
----------	--------------------------	--

7-1		<p style="text-align: center;">7-2</p> <ul style="list-style-type: none"> ● Open the upper front door with key. (Refer to “3 Opening the Exterior Door”) ● Check the receipt jam. (①) ● Press down the button to open the lever (②) and lift up the transparent window guide. (③) ● Remove the jammed paper carefully (④) and close the lever (⑤). ● Set the paper. (⑥, Refer to “5 Receipt Paper Replenishment”)
-----	---	---

8	Device Reset	
----------	---------------------	--

	<ul style="list-style-type: none"> ● To reset each device with error of ATM, enter to “OP Main” screen, and press “CLEAR” key of EPP.
---	--

9	OP Main Screen	
----------	-----------------------	--

	<ul style="list-style-type: none"> ● To enter to Supervisor mode, press ENTER, CLEAR, CANCEL, 1, 2 and 3 keys in order. (Default Password: “555555” and it is changeable in Supervisor mode.) (①) ● If correct password is entered, “OPERATION FUNCTION” menu will be displayed. (②) * Pressing CLEAR key erases the entered number and pressing CANCEL key goes to in-service-mode.
---	---

Contact Information	
----------------------------	--